

**130902 to 130998**

# **Illustrated Parts List**

## **MODEL SERIES**

# **130902 to 130998**

### **TYPE NUMBERS**

0010 to 0041

0110 to 0370

### **TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW:**

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing or name plate of engine. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.




This diagram illustrates the exploded view of a mechanical assembly, likely a pump or engine component. The main body is labeled 304. Key sub-assemblies include a gear set (23A, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100), a valve assembly (13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100), and a piston/crank assembly (1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100). Other components shown include a gasket set (358 GASKET SET), a bolt/nut/wash (562 BOLT, 592 NUT, 229 WASH.), and various fasteners (screws, bolts, nuts, washers, springs, etc.). The diagram is labeled with part numbers 1 through 1000, with some parts having multiple views (e.g., 23A, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100).

★ SPECIAL TOOLS REQUIRED FOR INSTALLING

4243-32

2

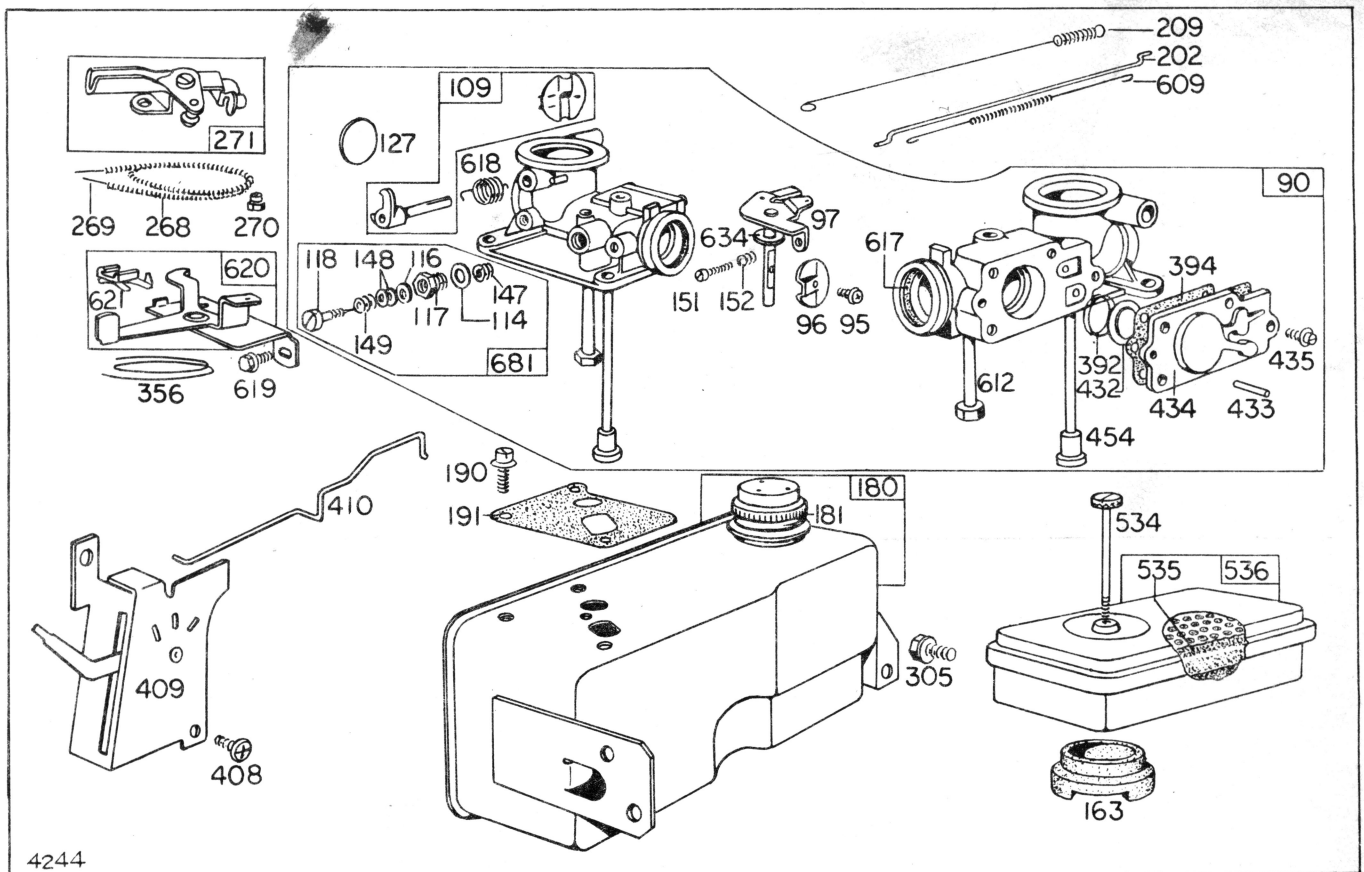

Assemblies include all parts shown in frames.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	299446	Cylinder Assembly	13	93368	Screw—Cylinder Head (2-3/32" long)			0135, 0136, 0139, 0142, 0150, 0159, 0161, 0164, 0168, 0176, 0193, 0194, 0217, 0231, 0241, 0246, 0267, 0271, 0272, 0273, 0274, 0275, 0302, 0303, 0320, 0321, 0322, 0336, 0339, 0345, 0351, 0356, 0369.
2	297565	Bushing—Cylinder			<b>Note:</b> 93583 Stud—Cylinder Head (1)			
		<b>Note:</b> Requires special tools for installation.			22963 Washer (1)			
3	89660	Seal—Oil			Used on type Nos. 0234, 0340.			
5	211542	Head—Cylinder	14	93369	Screw—Cylinder Head (2-15/32" long)	16	260922	Crankshaft
7	270383	Gasket—Cylinder Head			<b>Note:</b> 93583 Stud—Cylinder Head (1)			<b>Note:</b> 260936 Crankshaft
8	297261	Breather—Valve Chamber			22963 Washer (1)			Used on type Nos. 0015, 0111, 0116, 0121, 0124, 0134, 0137, 0144, 0145, 0146, 0147, 0148, 0149, 0155, 0162, 0167, 0169, 0172, 0175, 0179, 0180, 0182, 0195, 0203, 0206, 0209, 0211, 0216, 0218,
9	*27549	Gasket—Valve Cover			Used on type Nos. 0234, 0326.			
10	93394	Screw—Breather Mtg. Sem	15	91084	Plug—Oil Drain			
11	67738	Grommet—Breather			<b>Note:</b> 93418 Plug—Oil Drain (Hexagon Socket Head)			
12	270069	Gasket—Crankcase—.015" thick (Standard)			Used on type Nos. 0017,			
	270122	Gasket—Crankcase—.005" thick						
	270123	Gasket—Crankcase—.009" thick						

\* Included in Gasket Set—Part No. 297616.

# 130902 to 130998

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0219, 0220, 0225, 0226, 0229, 0230, 0232, 0233, 0251, 0257, 0258, 0260, 0278, 0280, 0294, 0299, 0302, 0307, 0308, 0312, 0313, 0324, 0325, 0344, 0348, 0362.			<b>261100</b> Crankshaft Used on type Nos. 0271, 0274, 0368.			<b>MODEL 130900 SERIES PISTON RING SETS:</b>
		<b>260997</b> Crankshaft Used on type Nos. 0200, 0234, 0256, 0292.			<b>261167</b> Crankshaft Used on type No. 0322.			<b>Note:</b> For Chrome Piston Ring Set -- standard size -- order Part No. 299742.
		<b>261045</b> Crankshaft Used on type Nos. 0017, 0112, 0117, 0122, 0125, 0136, 0138, 0139, 0140, 0141, 0142, 0150, 0151, 0154, 0157, 0158, 0159, 0160, 0164, 0166, 0168, 0170, 0173, 0174, 0176, 0178, 0181, 0184, 0187, 0188, 0189, 0190, 0191, 0192, 0193, 0194, 0198, 0199, 0202, 0204, 0205, 0207, 0214, 0217, 0221, 0222, 0223, 0227, 0231, 0236, 0237, 0238, 0242, 0243, 0244, 0246, 0247, 0248, 0249, 0250, 0253, 0264, 0266, 0269, 0270, 0272, 0273, 0275, 0276, 0279, 0283, 0284, 0287, 0288, 0289, 0291, 0293, 0297, 0303, 0304, 0311, 0315, 0316, 0317, 0318, 0320, 0321, 0323, 0327, 0329, 0330, 0331, 0332, 0333, 0334, 0335, 0338, 0340, 0341, 0342, 0345, 0346, 0350, 0353, 0354, 0356, 0357, 0359, 0360, 0361, 0363, 0364, 0365.			<b>261172</b> Crankshaft Used on type No. 0326.	<b>26</b>	<b>298982</b>	Ring Set--Std. Piston Consists of: <b>211467</b> Ring, Piston, Comp., Top, Standard <b>211468</b> Ring, Piston, Comp., Center, Standard <b>211469</b> Ring, Piston, Oil, Standard
		<b>261066</b> Crankshaft Used on type Nos. 0127, 0366.	<b>18</b>	<b>297587</b>	Sump--Oil <b>Note:</b> <b>298211</b> Sump--Oil Used on type Nos. 0040, 0120, 0121, 0122, 0123, 0124, 0125, 0153, 0163, 0185, 0238, 0243, 0256, 0300, 0341, 0352, 0361.	<b>298983</b>		Ring Set--.010" O.S. Piston Consists of: <b>211504</b> Ring, Piston, Comp., Top, .010" O.S. <b>211503</b> Ring, Piston, Comp., Center, .010" O.S. <b>211505</b> Ring, Piston, Oil, .010" O.S.
		<b>261098</b> Crankshaft Used on type Nos. 0025, 0259, 0261, 0262, 0265, 0281, 0285, 0286, 0295, 0296, 0309, 0310, 0358.			<b>390575</b> Sump--Oil Used on type Nos. 0025, 0026, 0127, 0252, 0257, 0259, 0261, 0262, 0263, 0265, 0271, 0274, 0276, 0277, 0281, 0285, 0286, 0290, 0295, 0296, 0298, 0309, 0310, 0322, 0326, 0336, 0339, 0347, 0358, 0366, 0368.	<b>298984</b>		Ring Set--.020" O.S. Piston Consists of: <b>211507</b> Ring, Piston, Comp., Top, .020" O.S. <b>211506</b> Ring, Piston, Comp., Center, .020" O.S. <b>211508</b> Ring, Piston, Oil, .020" O.S.
		<b>261099</b> Crankshaft Used on type Nos. 0026, 0252, 0263, 0277, 0290, 0298.	<b>19</b>	<b>297604</b>	Bushing--Oil Sump <b>Note:</b> Requires special tools for installation.	<b>298985</b>		Ring Set--.030" O.S. Piston Consists of: <b>211511</b> Ring, Piston, Comp., Top, .030" O.S. <b>211510</b> Ring, Piston, Comp., Center, .030" O.S. <b>211512</b> Ring, Piston, Oil, .030" O.S.
			<b>20</b>	<b>294167</b>	Seal--Oil <b>Note:</b> <b>298041</b> Seal--Oil (For Auxiliary Drive Shaft) Used on type Nos. 0040, 0120, 0121, 0122, 0123, 0124, 0125, 0153, 0163, 0185, 0238, 0243, 0256, 0300, 0341, 0352, 0361.	<b>27</b>	<b>26026</b>	Lock--Piston Pin
			<b>21</b>	<b>66768</b>	Plug--Oil Filler	<b>28</b>	<b>298909</b>	Pin Assy.--Piston--Std.
			<b>22</b>	<b>93032</b>	Screw--Sump Mtg. Sem		<b>298908</b>	Pin Assy.--Piston-- .005" O.S.
			<b>23</b>	<b>297229</b>	Flywheel--Magnet	<b>29</b>	<b>299429</b>	Rod Assy.--Connecting <b>Note:</b> For Connecting Rod with .020" undersize Crank-pin Bore -- order No. 390459.
			<b>23A</b>	<b>390509</b>	Flywheel--Magnet	<b>31</b>	<b>221876</b>	Lock--Conn. Rod Screw
			<b>24</b>	<b>61760</b>	Key--Flywheel			
			<b>25</b>	<b>298904</b>	Piston Assy.--Standard			
				<b>298905</b>	Piston Assy.--.010" O.S.			
				<b>298906</b>	Piston Assy.--.020" O.S.			
				<b>298907</b>	Piston Assy.--.030" O.S.			



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
32	92296	Screw—Connecting Rod			0326, 0339, 0347.	202	260654	Link—Throttle
33	211119	Valve—Exhaust	73	221923	Screen—Rewind Starter	209	260703	Spring—Governor
34	261044	Valve—Intake (Used after Code No. 6907231)	74	93490	Screw—Rotating Screen and Rectifier Mtg. Sem (Ref. No. 809)			(For 4000 RPM Top Speed Setting)
	<b>Note:</b>	260961 Valve—Intake (Used before Code No. 6907241)	75	220865	Washer—Spring		<b>Note:</b>	260711 Spring—Governor (For 3300 RPM Top Speed Setting)
35	260552	Spring—Intake Valve	76	68238	Washer—Ratchet Sealing			Used on type Nos. 0015, 0016, 0017, 0025, 0026, 0040, 0130, 0131, 0133, 0135, 0136, 0137, 0139, 0142, 0143, 0144, 0145, 0146, 0147, 0148, 0151, 0152, 0154, 0156, 0159, 0162, 0165, 0167, 0168, 0172, 0177, 0179, 0180, 0182, 0183, 0188, 0190, 0191, 0193, 0194, 0195, 0197, 0199, 0201, 0202, 0203, 0205, 0206, 0207, 0208, 0209, 0211, 0213, 0214, 0221, 0222, 0232, 0233, 0234, 0236, 0238, 0239, 0242, 0245, 0249, 0251, 0257, 0259, 0260, 0262, 0264, 0266, 0268, 0269, 0270, 0275, 0276, 0277, 0280, 0281, 0283, 0285, 0286, 0287, 0288, 0289, 0290, 0292, 0293, 0298, 0299, 0300, 0301, 0312, 0313, 0315, 0324, 0325, 0328, 0329, 0331, 0332, 0336, 0337, 0338, 0339, 0341, 0349, 0351, 0352, 0355, 0356, 0357, 0359, 0360, 0361, 0363, 0364, 0367, 0368, 0369.
36	26478	Spring—Exhaust Valve	81	222263	Lock—Muffler Screw			261047 Spring—Governor (For 3100 RPM Top Speed Setting)
40	93312	Retainer—Valve Spring		<b>Note:</b>	222265 Lock—Muffler Screw Used on type Nos. 0188, 0227, 0236.			Used on type Nos. 0132, 0149, 0186, 0212, 0215, 0224, 0225, 0226, 0228, 0229, 0230, 0231, 0240, 0241, 0244, 0246, 0247, 0261, 0263, 0271, 0279, 0284, 0344, 0353.
45	260642	Tappet—Valve	90	299448	Carburetor Assembly			261108 Spring—Governor (For 2600 RPM Top Speed Setting)
46	211590	Gear—Cam	95	93385	Screw—Throttle Valve to Shaft Sem			Used on type Nos. 0217, 0241, 0267, 0272, 0273,
	<b>Note:</b>	211618 Gear—Cam Used on type Nos. 0040, 0120, 0121, 0122, 0123, 0124, 0125, 0153, 0163, 0185, 0238, 0243, 0256, 0300, 0341, 0352, 0361.	96	211237	Valve—Throttle			
52	270070	Gasket—Intake Elbow Mounting	97	299692	Shaft and Lever—Throttle			
55	299431	Housing—Rewind Starter	109	390076	Shaft, Lever and Valve— Choke			
56	295871	Pulley—Rewind Starter	114	66594	Gasket—Needle Valve Nut			
57	294303	Spring—Rewind Starter	116	65978	Packing—Needle Valve			
58	66564	Rope—Rewind Starter— 47-1/8" long	117	230590	Nut—Needle Valve			
	<b>Note:</b>	If longer rope is needed order No. 66574 and cut to required length.	118	23433	Valve—Needle			
59	230228	Pin—Starter Rope	123	93512	Screw—Intake Elbow Mtg.			
60	66728	Grip—Starter Rope	124	93367	Screw—Intake Elbow Mtg.			
61	68848	Bumper—Starter Pulley	127	22831	Plug—Welch			
62	93254	Screw—Pulley Bumper Mounting	147	230591	Seat—Needle Valve			
65	93067	Screw—Rewind Starter Housing Mounting (Used after Code No. 6909127)	148	22235	Washer—Needle Valve (2)			
	<b>Note:</b>	93163 Screw—Rewind Starter Housing Mounting Sem (Used before Code No. 6909157)	149	26336	Spring—Needle Valve			
66	298310	Clutch Assy.—Rewind Starter	151	92634	Screw—Machine, Rd. Hd.—5-40 x 5/8"			
67	211383	Housing—Starter Clutch	152	260575	Spring—Throttle Adjustment			
68	63770	Ball—Clutch	163	*27660	Gasket—Air Cleaner Mtg.			
69	93676	Washer—Spring		<b>Note:</b>	270488 Gasket—Air Cleaner Mtg. Used on type Nos. 0135, 0159, 0183, 0187, 0190, 0194, 0195, 0196, 0201, 0204, 0205, 0219, 0228, 0231, 0239, 0242, 0247, 0250, 0273, 0282, 0292, 0321, 0336.			
70	298436	Ratchet—Starter Clutch			270730 Gasket—Air Cleaner Used on type No. 0324.			
71	221653	Washer—Clutch Retainer	180	297257	Tank Assembly—Fuel			
	<b>Note:</b>	222277 Cover—Ratchet Housing Used on type Nos. 0322,	181	298425	Cap—Fuel Tank			
			190	93341	Screw—Fuel Tank Mtg.			
			191	270073	Gasket—Fuel Tank Mtg.			
			200	221480	Guide—Air			
			201	260649	Link—Governor			

\* Included in Gasket Set—Part  
No. 297616.

# 130902 to 130998

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0274, 0303, 0306, 0316, 0320, 0321, 0322, 0333, 0345, 0350, 0354, 0365.			<b>390918</b> Muffler—Exhaust Uses: <b>222261</b> Deflector <b>93014</b> Screw	<b>340</b>	<b>26018</b>	Spring—Breaker Arm
<b>219</b>	<b>297249</b>	Oil Slinger Gear, Governor and Bracket			Used on type Nos. 0326, 0340, 0348, 0352, 0366, 0369.	<b>341</b>	<b>93381</b>	Screw—Breaker Arm Mounting Sem
<b>227</b>	<b>297583</b>	Lever Assy.—Governor			<b>391110</b> Muffler—Exhaust Used on type No. 0343.	<b>342</b>	<b>65704</b>	Plunger—Breaker Point
<b>229</b>	<b>220660</b>	Washer—Governor Lever				<b>344</b>	<b>93042</b>	Screw—Condenser Clamp Mounting Sem
<b>230</b>	<b>221559</b>	Washer—Governor Lever	<b>302</b>	<b>91242</b>	Locknut—Muffler and Elbow	<b>345</b>	<b>220366</b>	Cover—Breaker Point and Condenser
<b>265</b>	<b>22372</b>	Clamp—Casing	<b>303</b>	<b>91464</b>	Elbow—Muffler, 90°, Street	<b>346</b>	<b>93014</b>	Screw—Dust Cover Mounting
<b>267</b>	<b>93469</b>	Screw—Clamp Mounting			<b>Note:</b> <b>91219</b> Elbow—Muffler, 45° Street Used on type No. 0141.	<b>353</b>	<b>92791</b>	Washer—Lock—Shakeproof (2)
<b>268</b>	<b>66986</b>	Casing—Control Wire—48" long			<b>91245</b> Nipple, Exhaust Used on type Nos. 0146, 0175.	<b>354</b>	<b>90576</b>	Nut—Hex.—8-32
	<b>Note:</b>	If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.	<b>304</b>	<b>299332</b>	Housing—Blower	<b>356</b>	<b>298479</b>	Wire—Ground
<b>269</b>	<b>26099</b>	Wire—Control, 54" long			<b>Note:</b> <b>390320</b> Housing—Blower Used on type Nos. 0025, 0026, 0127, 0252, 0259, 0261, 0262, 0263, 0265, 0271, 0274, 0277, 0281, 0285, 0286, 0290, 0295, 0296, 0298, 0309, 0310, 0322, 0326, 0339, 0347, 0358, 0366, 0368.	<b>356A</b>	<b>295413</b>	Wire—Ground
	<b>Note:</b>	If longer wire is needed, specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.					<b>Note:</b>	<b>391013</b> Wire—Ground Used on type Nos. 0016, 0026, 0333, 0334, 0343, 0350.
<b>270</b>	<b>63426</b>	Locknut—Control Wire Casing	<b>305</b>	<b>93158</b>	Screw—Tank Bracket Mounting Sem	<b>358</b>	<b>297616</b>	Gasket Set
<b>271</b>	<b>290568</b>	Lever Assy.—Control	<b>306</b>	<b>221484</b>	Shield—Cylinder	<b>372</b>	<b>220477</b>	Clamp—Condenser
<b>300</b>	<b>297274</b>	Muffler—Exhaust (Side Outlet)	<b>307</b>	<b>93042</b>	Screw—Sem	<b>374</b>	<b>92813</b>	Washer—Lock
	<b>Note:</b>	<b>294599</b> Muffler—Exhaust Used on type Nos. 0141, 0145, 0146, 0160, 0175, 0177, 0184, 0192, 0204, 0223, 0237, 0244, 0249, 0263, 0275, 0287, 0311, 0317, 0328, 0364.	<b>308</b>	<b>221452</b>	Cover—Cylinder Head	<b>375</b>	<b>294628</b>	Breaker Points and Condenser Set
		<b>297506</b> Muffler—Exhaust (Direct Outlet) Used on type Nos. 0135, 0136, 0138, 0148, 0150, 0152, 0155, 0157, 0161, 0163, 0164, 0173, 0182, 0189, 0194, 0202, 0209, 0226, 0232, 0235, 0251, 0252, 0256, 0258, 0259, 0264, 0269, 0278, 0294, 0295, 0296, 0297, 0327, 0336, 0338, 0339, 0362.	<b>309</b>	<b>390232</b>	Motor—Starting (12 volt) (American Bosch Arma No. SMG-12A-2)		<b>Note:</b>	<b>299061</b> Ignition Kit Includes: <b>294628</b> Point Set <b>65704</b> Plunger <b>61760</b> Key—Flywheel
		<b>299629</b> Muffler—Exhaust Used on type No. 0188.	<b>310</b>	<b>93648</b>	Bolt—Starter Motor	<b>377</b>	<b>93065</b>	Key—Woodruff No. 6
		<b>390147</b> Muffler—Exhaust Used on type Nos. 0227, 0236.	<b>325</b>	<b>299421</b>	Starter Pulley with Screen	<b>392</b>	<b>260455</b>	Spring—Fuel Pump Diaphragm
			<b>330</b>	<b>69932</b>	Rope—Starter	<b>394</b>	<b>270026</b>	Diaphragm
			<b>331</b>	<b>220865</b>	Washer—Flywheel	<b>408</b>	<b>93537</b>	Screw—Sem
			<b>332</b>	<b>92284</b>	Nut—Flywheel	<b>409</b>	<b>299509</b>	Housing—Speed Control
			<b>333</b>	<b>298316</b>	Armature—Magneto	<b>410</b>	<b>260948</b>	Link—Speed Control
			<b>334</b>	<b>93613</b>	Screw—Armature Mtg. Sem	<b>423</b>	<b>93654</b>	Screw—Sem
			<b>335</b>	<b>93414</b>	Screw—Armature Mtg. Sem	<b>432</b>	<b>221377</b>	Cap—Spring
			<b>337</b>	<b>298809</b>	Plug—Spark (with gasket) (1-1/2" High—38 M. M.)	<b>433</b>	<b>93265</b>	Pin—Diaphragm Cover
					<b>29693</b> Plug—Spark (with gasket) (2" High—51 M. M.)	<b>434</b>	<b>210959</b>	Cover—Diaphragm
				<b>Note:</b>	Spark Plugs <b>298809</b> and <b>29693</b> use Ignition Cable Terminal No. 221798.	<b>435</b>	<b>93141</b>	Screw—Diaphragm Cover
						<b>454</b>	<b>296178</b>	Housing—Fuel Pipe Screen (For 3/16" O. D. Pipe)
						<b>474</b>	<b>390410</b>	Stator and Rectifier Assembly—Alternator
						<b>481</b>	<b>230970</b>	Bushing—Stator
						<b>482</b>	<b>93639</b>	Screw—Alternator Armature Mounting
						<b>506</b>	<b>90200</b>	Screw—Machine, Fil. Hd.—8-32 x 1/2"
						<b>507</b>	<b>66895</b>	Insulator

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
508	93636	Screw—Sem	608	299334	Starter Assy.—Rewind			0296, 0307, 0308, 0309,
513	390581	Drive Assy.—Starter	609	260029	Spring—Throttle Link			0310, 0320, 0322, 0342,
516	260374	Spring—Connector	612	296811	Pipe—Fuel (Plastic)			0345, 0347, 0356.
520	93722	Terminal—Spade	613	93377	Screw—Muffler Mounting			<b>391091</b> Plate Assy.—
523	298664	Cap with Dipstick—Oil Filler		<b>Note:</b>	<b>93704</b> Screw—Muffler Mounting			Manual Carburetor Control
		For complete Oil Fill			Used on type Nos. 0326,			Used on type Nos. 0132,
		Cap and Oil Filler Tube			0340, 0352, 0366, 0369.			0200, 0213, 0343, 0349.
		Assy.—order No. 298715.			<b>93549</b> Screw—Muffler			<b>391137</b> Plate Assy.—
	<b>Note:</b>	<b>390212</b> Cap with Dipstick—Oil Filler			Mounting			Remote Carburetor Control
		Used on type Nos. 0285,			Used on type Nos. 0188,			Used on type Nos. 0336,
		0286, 0368.			0227, 0236.			0337, 0339, 0355.
524	270306	Seal—Oil Filler Tube to Sump			<b>93721</b> Screw—Muffler Mounting	621	297472	Switch—Stop
525	298665	Tube—Oil Filler			<b>261186</b> Spacer—Muffler Mounting	622	260676	Washer—Spring
	<b>Note:</b>	<b>390217</b> Tube—Oil Filler			Used on type No. 0343.			(Used between cam gear boss and oil slinger bracket)
		Uses: <b>93612</b> Screw—	614	93306	Cotter—Hair Pin	623	93566	Screw—Shoulder
		Clamp Mounting	615	93307	Retainer—E-Ring	624	297252	Lever—Linkage
		Used on type Nos. 0285,	616	230714	Crank—Governor	625	297254	Elbow and Tube—Intake
		0286, 0368.	617	270074	Seal—Intake Elbow Tube	634	270167	Washer—Throttle Shaft (Felt)
527	93376	Clip—Breather Pipe	618	260648	Spring—Choke Return	635	66538	Elbow—Spark
528	230717	Tube—Breather	619	93380	Screw—Control Plate Mtg.		<b>Note:</b>	<b>89742</b> Shield—Spark Plug
529	67608	Grommet—Breather Tube	620	297548	Plate Assy.—Remote Carburetor Control			Used on type No. 0324.
534	93374	Screw—Air Cleaner		<b>Note:</b>	<b>297457</b> Plate Assy.—	646	222162	Bracket—Starter Motor
	<b>Note:</b>	<b>63949</b> Stud—Air Cleaner			Manual Carburetor Control	655	221014	Anchor—Spring
		<b>92067</b> Nut—Wing			Used on type Nos. 0118,	664	93415	Screw—Sem
		Used on type No. 0324.			0119, 0120, 0121, 0122,	665	296768	Oil Minder
535	270447	Element—Air Cleaner			0126, 0128, 0129, 0131,	670	261065	Spacer—Armature
	<b>Note:</b>	<b>390492</b> Element—Air Cleaner			0139, 0141, 0147, 0150,	681	299060	Needle Valve Kit
		Uses: <b>390588</b> Cover			0156, 0158, 0162, 0171,	724	231004	Retainer—Oil Filler Tube Seal
		<b>221969</b> Support			0172, 0176, 0184, 0192,	725	221885	Shield—Heat
		Used on type No. 0324.			0193, 0197, 0210, 0214,	727	390317	Housing—Drive
536	299447	Cleaner Assembly—Air			0221, 0224, 0230, 0244,	748	93534	Screw—Sem
544	390467	Armature—Starter			0248, 0253, 0254, 0255,	781	280068	Cap—Starter Pulley
548	93649	Washer—Armature			0261, 0275, 0287, 0288,	783	230972	Gear—Electric Starter Pinion
552	230735	Bushing—Governor Shaft			0298, 0302, 0306, 0314,			
562	92613	Bolt—Governor Lever			0318, 0328, 0330, 0331,	785	270677	Gasket—Starter Drive Housing
592	90356	Nut—Hex.—10-24			0335, 0351, 0359, 0362,	801	390318	End Head—Starter
594	93559	Screw—Blower Housing Mounting Sem			0369.	802	390465	Cap Assembly—Commutator End
	<b>Note:</b>	<b>92747</b> Screw—Sem			<b>299831</b> Plate Assy.—	803	390468	Housing Assembly—Starter
		Used to mount Blower Housing, Rider-Trol and Oil Fill Tube on type Nos. 0219, 0239.			Remote Carburetor Control	809	390414	Rectifier—Alternator
					Used on type Nos. 0175,			
					0216, 0252, 0260, 0265,			
					0278, 0291, 0294, 0295,			

130902 to 130998

